



Puccaneers



Dynaflex

B.O. Mexico C.Tel. 025 2272 Fax 10 10007

SOLDER SIDE		COMPONENT SIDE
GND	1	GND
GND	2	GND
+5 V.	3	+5 V.
+5 V.	4	+5 V.
	5	
+12 V.	6	+12 V.
POST	7	POST
COUNTER 2	8	COUNTER 1
	9	
SPEAKER (-)	10	SPEAKER (+)
	11	
VIDEO G	12	VIDEO R
SYNC	13	VIDEO B
	14	VIDEO GND
	15	
COIN 2	16	COIN 1
2P START	17	1P START
2P UP	18	1P UP
2P DOWN	19	1P DOWN
2P LEFT	20	1P LEFT
2P RIGHT	21	1P RIGHT
2P PUNCH	22	1P PUNCH
2P KICK	23	1P KICK
	24	
	25	
	26	
GND	27	GND
GND	28	GND

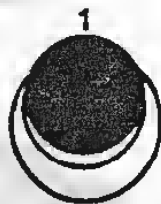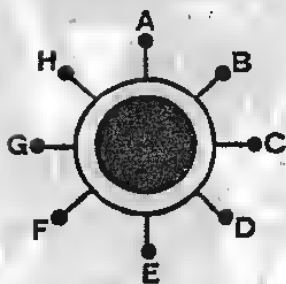

	JOYSTICK	BUTTON 1	BUTTON 2
A	JUMP	SOMERSAULT	JUMP + KICK
B	JUMP FORWARD TO THE RIGHT	SOMERSAULT FORWARD	JUMP FORWARD + KICK
C	WALK TO THE RIGHT	PUNCH/SHOOT	KICK
D	CROUCH TO THE RIGHT	PUNCH/SHOOT	KICK
E	CROUCH DOWN	PUNCH/SHOOT	KICK
F	CROUCH TO THE LEFT	PUNCH/SHOOT	KICK
G	WALK TO THE LEFT	PUNCH/SHOOT	KICK
H	JUMP FORWARD TO THE LEFT	SOMERSAULT FORWARD	JUMP FORWARD + KICK

DIP SWITCH N°1

COIN.1

SW	1	2	3	4	COIN	PLAY
	OFF	OFF	OFF	OFF	1	1
	ON	OFF	OFF	OFF	1	2
	OFF	ON	OFF	OFF	1	3
	ON	ON	OFF	OFF	1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF	ON	OFF	2	1
	OFF	ON	ON	OFF	2	3
	ON	ON	ON	OFF	2	5
	OFF	OFF	OFF	ON	3	1
	ON	OFF	OFF	ON	3	2
	OFF	ON	OFF	ON	3	5
	ON	ON	OFF	ON	4	1
	OFF	OFF	ON	ON	4	3
	ON	OFF	ON	ON	4	5
	OFF	ON	ON	ON	5	1
	ON	ON	ON	ON	5	2

COIN.2

SW	5	6	7	8	COIN	PLAY
	OFF	OFF	OFF	OFF	1	1
	ON	OFF	OFF	OFF	1	2
	OFF	ON	OFF	OFF	1	3
	ON	ON	OFF	OFF	1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF	ON	OFF	2	1
	OFF	ON	ON	OFF	2	3
	ON	ON	ON	OFF	2	5
	OFF	OFF	OFF	ON	3	1
	ON	OFF	OFF	ON	3	2
	OFF	ON	OFF	ON	3	5
	ON	ON	OFF	ON	4	1
	OFF	OFF	ON	ON	4	3
	ON	OFF	ON	ON	4	5
	OFF	ON	ON	ON	5	1
	ON	ON	ON	ON	5	2

DIP SWITCH N°2

SW	1	2	3	4	5	6	7	8
VIDEO INV	ON							
VIDEO NORMAL	OFF							
NUMBER OF PLAYER 2		OFF	OFF					
" " " 3		ON	OFF					
" " " 4		OFF	ON					
" " " 5		ON	ON					
EASY				OFF	OFF			
NORMAL				ON	OFF			
DIFFICULT				OFF	ON			
NO DEAD MODE				ON	ON			
TABLE MODE						ON		
NORMAL MODE						OFF		
NO SOUND DEMO							ON	
SOUND DEMO							OFF	
CONTINUE PLAY								ON
NO CONTINUE PLAY								OFF



Duintronic sa